



A

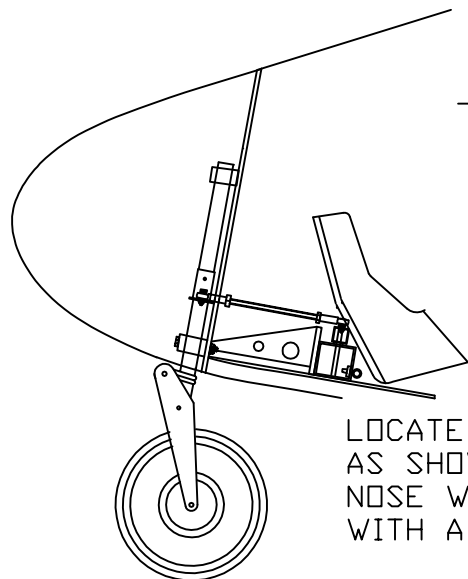


LOCATE STEERING BRKT
AS SHOWN DRILL 5MM THROUGH
NOSE WHEEL LEG AND FIX
WITH A 5MM BOLT

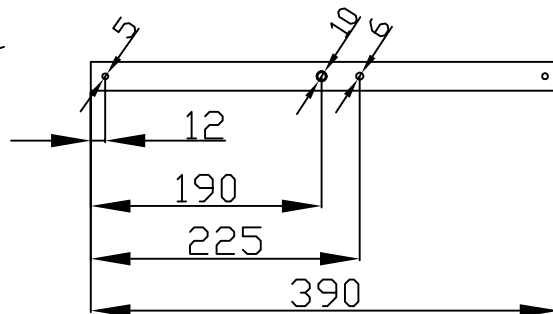

CASTLEATED NUT
AND SPLIT PIN

10X8MM MS PIVOT
TUBE BRAZE TO
RUDDER BAR

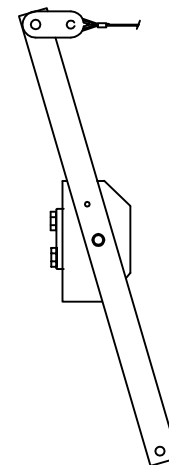

3/32 STEEL
RUDDER CABLE
SECURE WITH A
NICOPRESS SLEEVE



12 MM PLY
SUPPORT GUSSET
GLUE & SCREW
AND FIX WITH
FG TAPE TO FLOOR
AS SHOWN




BUTT AGAINST
RUDDER BAR BRKT

FIT BOLT FROM
BOTTOM

BOND FLOOR PANEL WITH
FG SLURRY FG TAPE EDGES

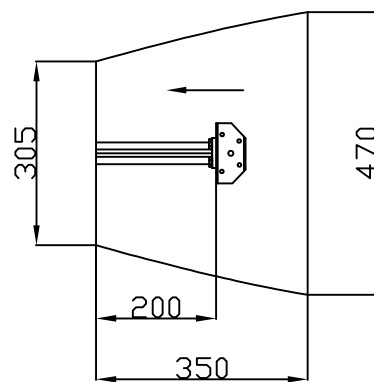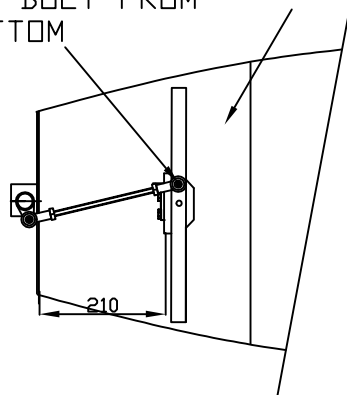

MS M6 THREADED ROD 6MM ROD ENDS

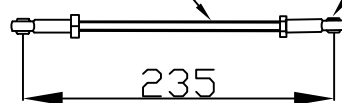


SET UP ON ASSY

FLOOR PANEL
CHECK DIMS
ON ASSY
6MM BIRCH PLY

FIT A
RUBBER
INERTUBE
BUFFER
HERE


CASTLEATED NUT
& SPLIT PIN

5MM CSK BOLTS

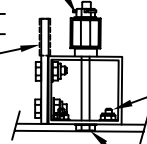


FIT BOLT HD INTO PLY
SECURE WITH JB ADHESIVE


6MM ALLY 6082T6
STOP PLATE

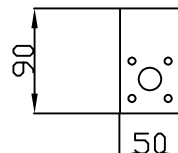

6MM THICK
SPACER
M8 BOLT

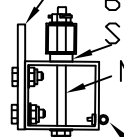


FIT EYE BOLT
FOR TRIM SPRING

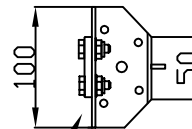


M6 BOLTS

RUDDER BAR PIVOT BRKT
50X50X3 6082T6 SQUARE TUBE

35DIAX1,6
MS TUBE

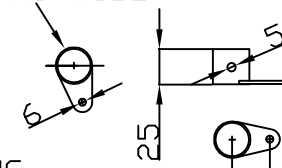

STEERING BRKT
MS WELD ARM
TO TUBE

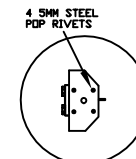

MW9B-56
NOSE WHEEL STEERING